



BOCCHI
IL BAGNO PER TUTTI

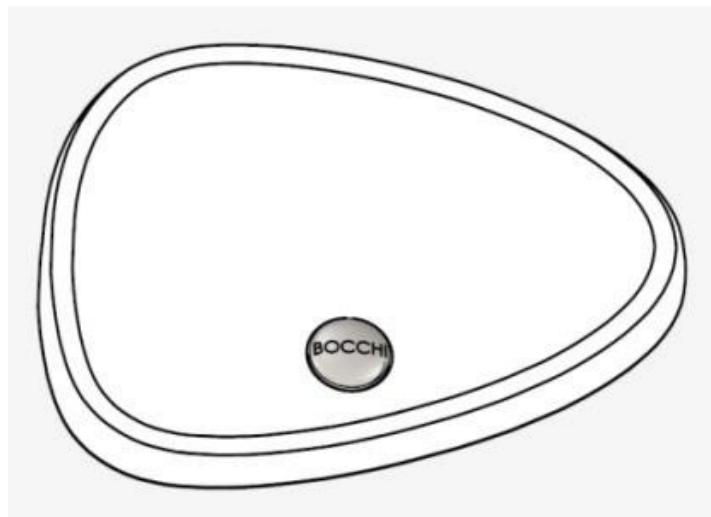


**DEEP-RESERVOIR WASHBASIN
INSTALLATION INSTRUCTIONS**


DEEP-RESERVOIR WASHBASIN INSTALLATION

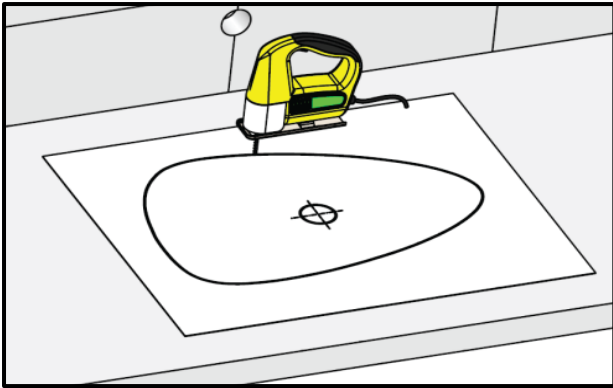


Attach the cutting template to the counter and cut the counter from the marked part.

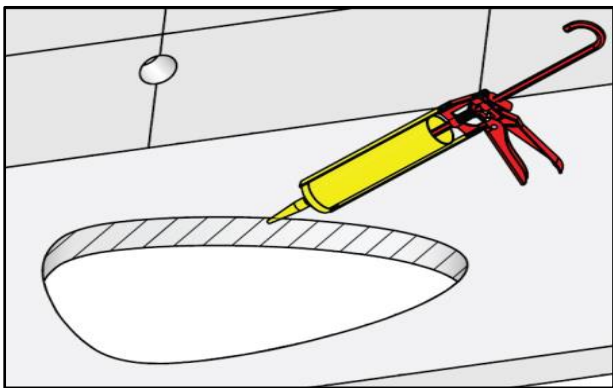

Apply silicone to prevent moisture in case of using wooden counter.

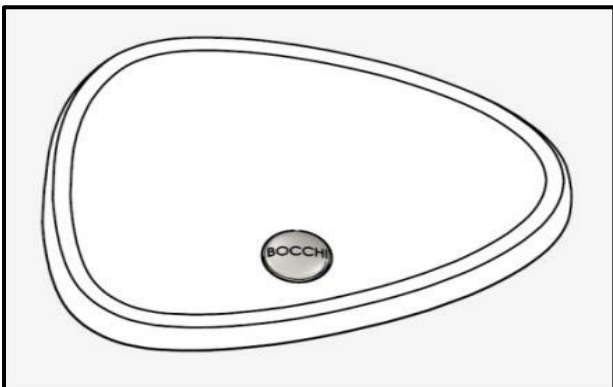


Make syphon connection.

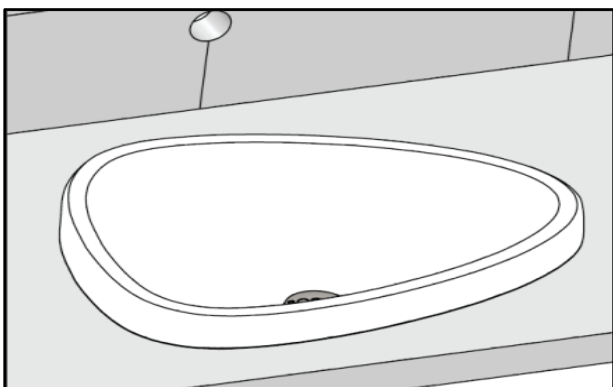


Place the washbasin.


DEEP-RESERVOIR WASHBASIN INSTALLATION

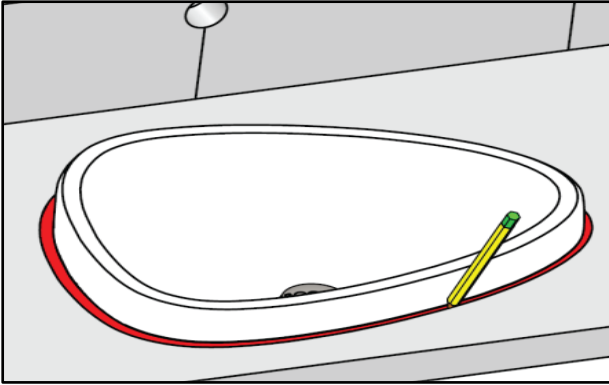


Center the washbasin and mark the edges to the counter.

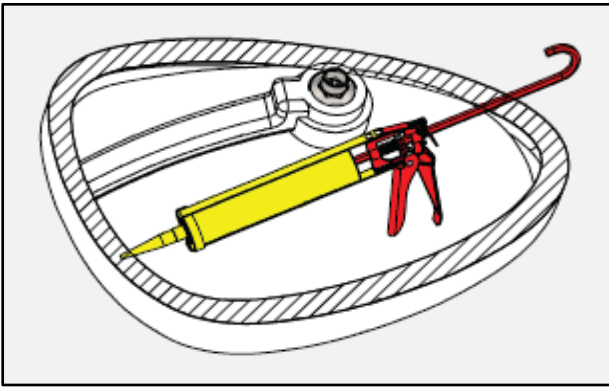

Apply silicone to washbasin installation surface.

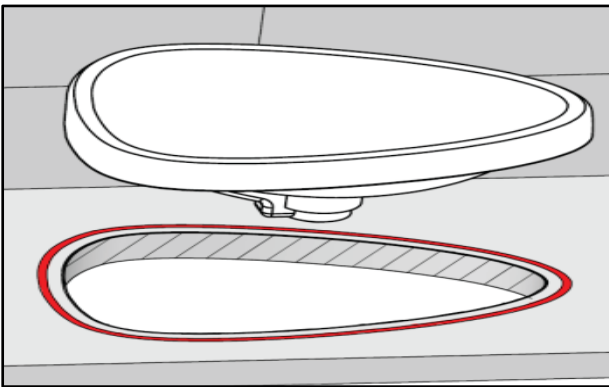

Place the washbasin.

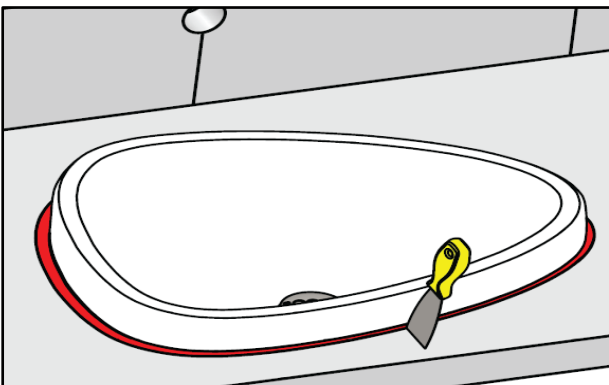

Remove excessive silicone and wait for 24 hours.